




Tallis Vertical Fitting Instructions

Oval Tube Steel Radiator

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.

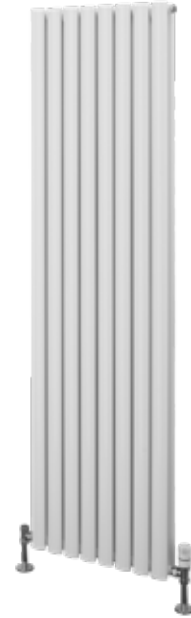

Drawings

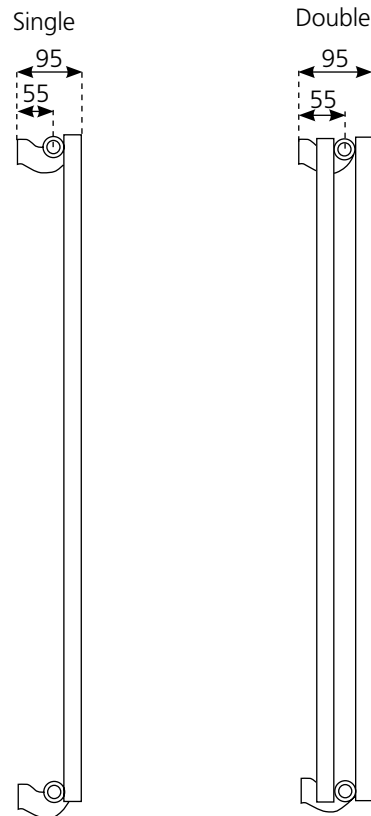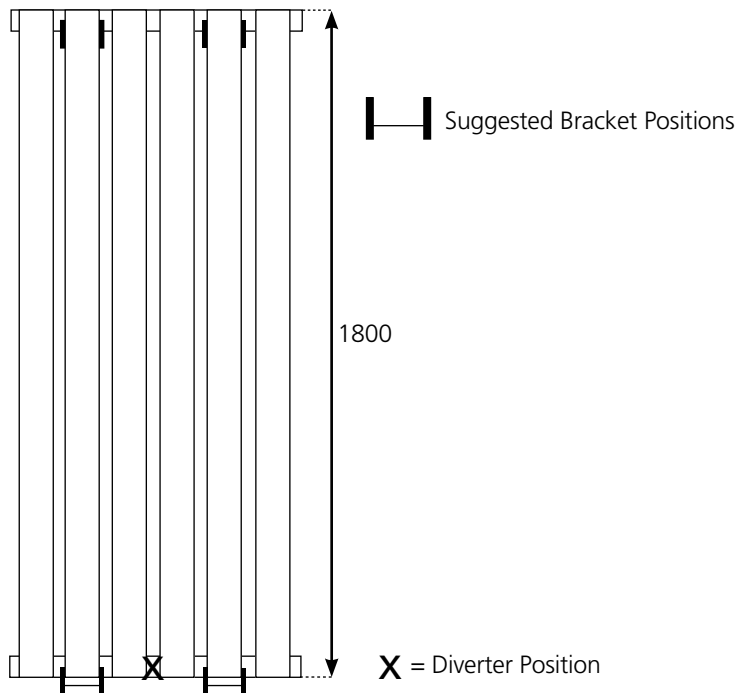

Pipe Centres

	Single	Double
Pipe centres left to right =	width plus valves	width plus valves
Pipe centres from wall =	55mm	55mm
Depth from wall =	95mm	95mm

PLEASE NOTE Systems using micro bore pipe work must have adequate pressure and flow rates for the number and style of radiators on the system.

1. Unpack & Inspect

This product should have reached you in perfect condition. Please carefully unpack and inspect this radiator and all fittings. Your point of purchase must be notified of any shortages or damage within 28 days of delivery.

For further information please see terms and conditions at the bottom of the page.

2. Contents

You should have:

- 1 Radiator
- 4 Wall Brackets
- 1 Airvent
- 1 Blanking Plug

You will need:

- Tape measure
- Electric drill and bits
- Spirit level

The fixing kits (screws and dowels) are suitable for compact walls or hollow bricks. Please ensure suitable fixings are used for the correct wall type.

3. Diverter

This product requires a diverter to work which is already pre-fitted. There is a sticker on the collector to identify the diverter position.

The diverter can also be located by looking through the ends of the collectors. If a diverter is present there will be a blockage with no light passing through. The collector with the diverter needs to be at the bottom when hung. (*please see diagram overleaf*)

4. Fix Brackets

PLEASE NOTE:

It is essential that all brackets are level and square prior to hanging the radiator to ensure a vertical alignment for connecting the pipework.

The brackets for the Tallis do not have fixed positions. However, for even weight distribution we suggest placing the brackets under the second elements in (*please refer to diagram overleaf*)

Following the diagram overleaf, the holes for the brackets are measured at 110mm in from the edge of the collectors either side. When positions are marked, using a suitable drill bit and plugs hang the brackets on the wall. Offer up the radiator to check the position, and if the brackets are in suitable positions and are level, hold the radiator and measure the positions for the bottom two brackets.

Take down the radiator and using suitable drill bits and plugs, fix the bottom brackets to the wall. When completed, the radiator is simply slotted onto the brackets.

5. Hang & Commission Radiator

The diverter needs to be at the bottom end when hung. When commissioning your radiator on an indirect/closed system we recommend using a suitable quality and quantity of mixed metal inhibitor to protect against scale & corrosion.

Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

Technical Specifications

Materials	Steel
Connections	½" flow and return.
Test pressure	6.5 Bar
Testing authority	EN442
Maximum operating pressure	5 Bar
Maximum working temperature	95 °C
Packaging	Wrapped in polythene & boxed.

Guarantees & Liabilities

This product is guaranteed for 10 years. As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer.

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to us.

Terms & Conditions

All products must be inspected once removed from the packaging and your point of purchase notified within 28 days of delivery of any scratches, blemishes or other damage. Your point of purchase will then agree appropriate action.

Imperfect radiators should therefore not be fitted and we will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If we are not notified within 28 days of the date on the signed delivery note then it will be deemed that we have fully complied with our obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims. We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation, we cannot accept responsibility for items damaged after delivery.

For full details of our Terms and Conditions please visit www.supplies4heat.co.uk or call us on 01342 306880.